



Main Assembly		Part No
	2M 5Aux Integrated, Anticompound	820 023 001
	2M 5Aux Integrated, Anticompound, QRV	820 019 001
	2M 5Aux, Integrated, Anticompound, Stability	820 011 001
	2M 5Aux Integrated, Anticompound, Stability, QRV	820 007 001
	2M 5Aux Integrated, Anticompound, Stability, QRV, Super Aux	820 008 001
	3M 5Aux Master and Slave kit	820 028 001
	Integrated Anticompound, Stability, QRV	
ISO 7638		Part No
	9 Meters	814 003 132
	12 Meters	814 003 102
	16 Meters	814 003 112
	For Full Trailer 9 Meters	814 004 102
	12 Meters	814 004 112
ISO 1185 (24N)		Part No
	6 Meters	814 002 222
	9 Meters	814 002 242
	12 Meters	814 002 202
Sensor Cable		Part No
	2 Meters	814 004 421
	3 Meters	814 004 401
	6 Meters	814 004 411
	10 Meters	814 004 431
Auxiliary Cable		Part No
	2 Meters	814 001 322
	4 Meters	814 001 332
	7 Meters	814 001 302
Auxiliary DIN 72858		Part No
	5 Meters	814 012 141
	7 Meters	814 012 101
Side of Vehicle Cable		Part No
	2.5 Meters	814 010 111
	6.5 Meters	814 010 101
Super Aux		Part No
	6 Meters	814 002 301
	12 Meters	814 002 311
Diag +		Part No
	PC interface kit USB connector	815 028 001
	ECU Connection to PC 6.5 M Cable	814 001 601
	SOV connection to PC 6.5 M Cable	814 011 001
	ISO 7638 Connection to PC	815 018 001
	Upgrade kit to USB connector	950 800 902
Fleet+		Part No
	Fleet+ CD & guide kit	815 042 001
	Fleet+ kit with cables	815 019 001
	Fleet+ & DIAG+ kit with cables	815 043 001
Switch Box		Part No
	Back face mounted, 7 m	815 031 001
	Front face mounted, 7 m	815 040 001
Info Centre		Part No
	0.5 Meters SOV	815 010 011
	6.5 Meters ADR	815 013 011
	6.5 Meters	815 001 131
Labels		Part No
	Chassis Label	028 5276 09
	Information Label	028 5262 09
	Load Plate Data	028 5301 09
	Reflective EB+ Stability Label	028 5330 09

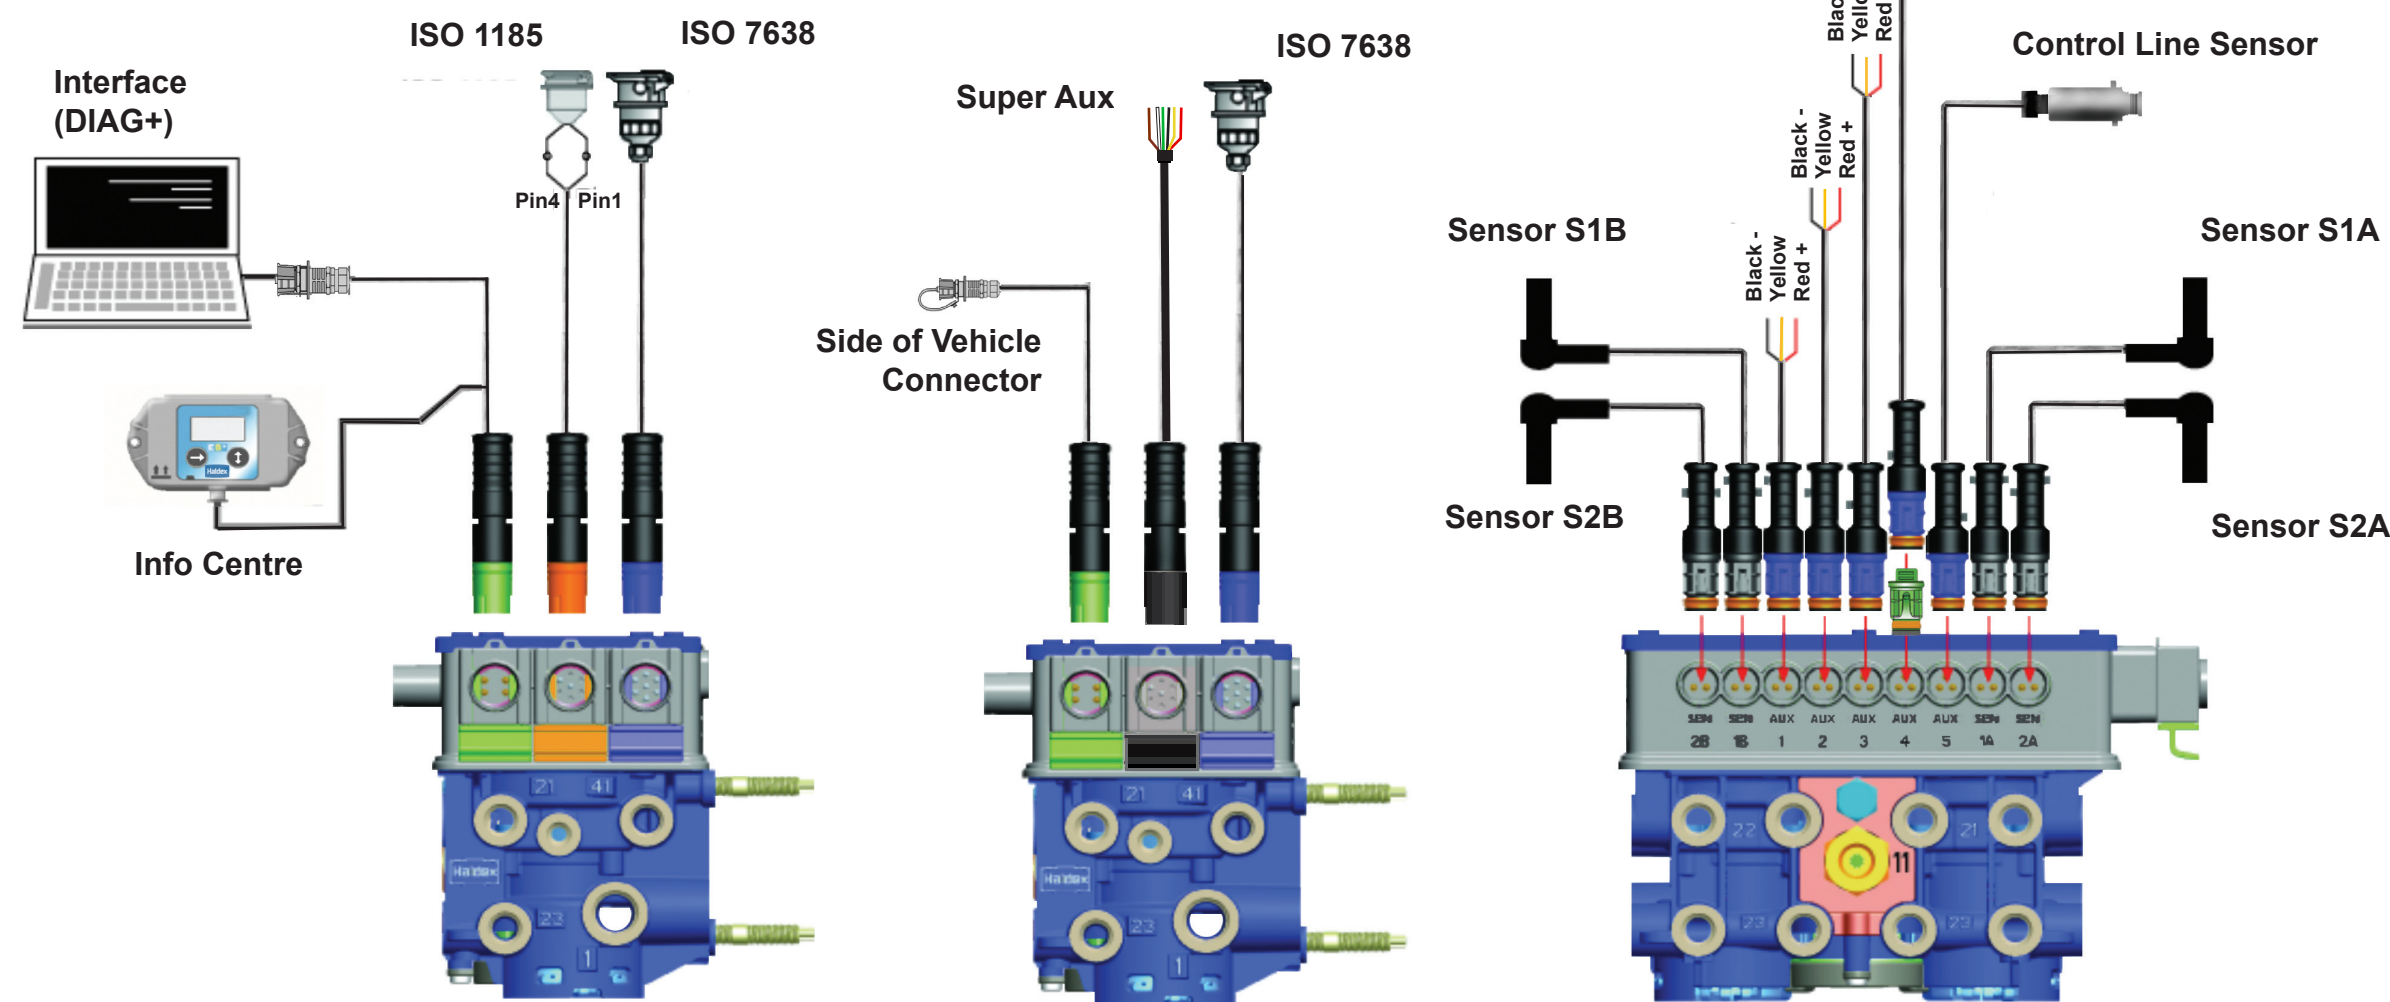

Aux 1	Aux 2	Aux 3	Aux 4	Aux 5
24 volt Switched Output	24 volt switched Output, Monitor Input	24 volt Switched Output, Monitor Input	Analogue Input 5 volt supply	Analogue Input 5 volt supply
COLAS Reset-to-Ride Height	COLAS Reset-to-Ride Height	COLAS Reset-to-Ride Height CO-	Lining Wear System Input	Lateral Accelerometer
Retarder Control	Retarder Control	Retarder Control	General purpose Input	General purpose Input
Trailer lamp	Trailer lamp	Trailer lamp	Control Line sensor	Control Line sensor
Lift-Axle Control (ILAS-E front and rear)	Lift-Axle Control (ILAS-E front and rear)	Lift-Axle Control (ILAS-E front and rear)	Soft Docking	Soft Docking
24 Volt Aux Power Output	ILAS-E Front & Rear Manual	ILAS-E Front & Rear Manual	Electronic Height Sensor	Electronic Height Sensor
Steer Axle Lock	24 Volt Aux Power Output	24 Volt Aux Power Output		
Service Lamp	Steer Axle Lock	Steer Axle Lock		
Remote Overload Lamp	Service Lamp	Service Lamp		
Overload Lamp	Remote Overload Lamp	Remote Overload Lamp		
Stability Lamp	Overload Lamp	Overload Lamp		
Lining Wear Lamp	Stability Lamp	Stability Lamp		
General purpose Output	Lining Wear Lamp	Lining Wear Lamp		
Info Point	General purpose Output	General purpose Output		
Info Point/Colas	Remote Switch Input Giving:	Remote Switch Input Giving:		
Tachometer	1) Manual Override traction assist	1) Manual Override traction assist		
	2) Manual only Lift Axle Control (auto drop)	2) Manual only Lift Axle Control (auto drop)		

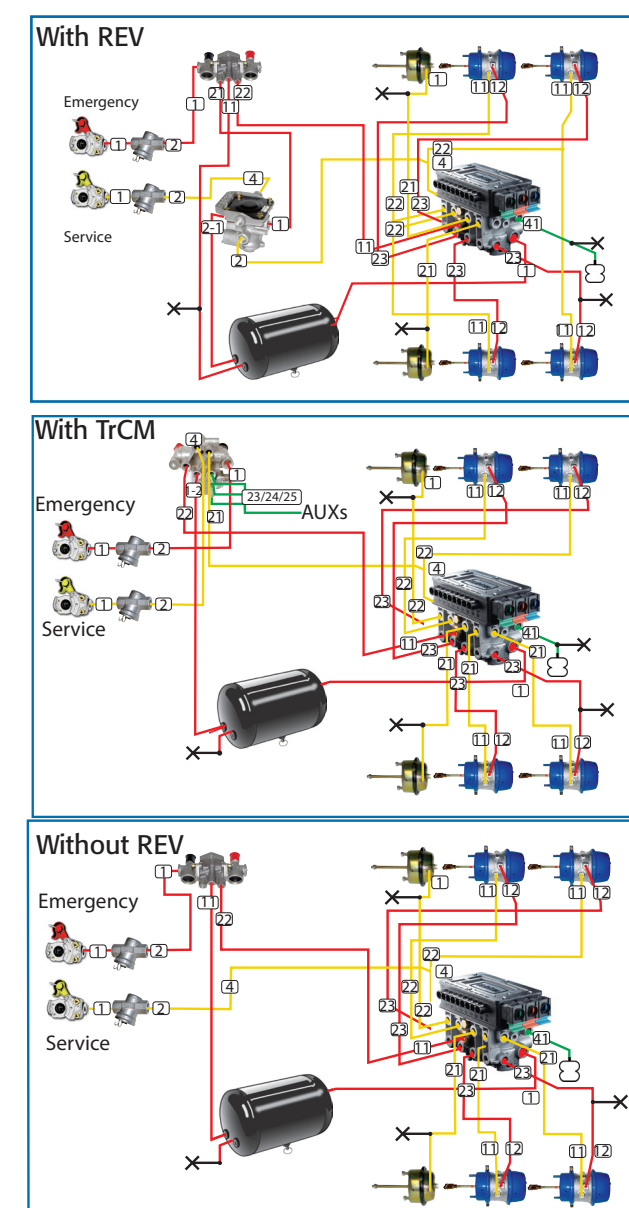

Pressure Switch		Part No
	Pressure Switch	041 502 309
	Pressure Switch Cable 10 Meters	814 001 502
	Pressure Switch Service kit	950 800 903
Control Line Sensor		Part No
	M16 x 1.5 thread for REV port	815 022 001
Lining Wear System		Part No
	Lining Wear System	815 015 001
	Blanking plug	027 5260 09
	Sensor Extension Cable 5 Meters	814 007 111
Info Point		Part No
	7 Meters	815 021 001
	18 Meters	815 021 011
Trailer Control Module		Part No
	c/w PPV, c/w label	352 067 001
	c/w PPV, w/o label	352 067 001
	w/o PPV, w/o ports 23, 24, 25, c/w label	352 067 021
	w/o PPV, w/o ports 23, 24, 25, w/o label	352 067 031
	c/w PPV, port 25 closed, c/w push-in fittings, c/w label	352 067 041
	c/w PPV, port 25 closed, c/w push-in fittings, w/o label	352 067 051
ILAS-E		Part No
	Without push-in	352 061 101
	Without push-in and Din connector	352 061 111
	With push-in	352 062 101
	With push-in & Din connector	352 062 011
	6-Port with push-in and DIN connector	352 070 021
	7-Port with push-in	352 070 001/011
Park and Shunt Valve		Part No
	w/o check valve, REV necessary	352 044 001
	c/w check valve, REV necessary	352 045 001
	c/w check valve, c/w Emergency function	352 046 001
Colas		Part No
	Colas dual RtR	338 051 101
	Colas dual Dead Man	338 052 101
	Colas dual basic	338 053 101
	Colas single RtR	338 057 101
	Colas+ single RtR (RoRo)	338 061 101
Relay Emergency Valve (REV)		Part No
	with port for Control Line Sensor	351 033 001
Electronic Height Sensor		Part No
	Electronic Height Sensor	815 030 001
	Electronic Height Sensor Cable 4 Meters	814 020 001
CAN Repeater		Part No
	CAN Repeater Assembly	815 020 001
	CAN Repeater Dolly Cable 18m	814 018 441
	CAN Repeater Link Cable 20m	814 017 312
Soft Docking		Part No
	Complete optical & acoustic kit	815 024 001
	Optical kit	815 026 001
	Acoustic kit	815 025 001
	Basic Kit	815 027 001
	Adjustment tool for Sensor	042 708 309
Main Assembly Service kits		Part No
	QRV Service kit	950 800 307
	DCV Service kit	950 800 905